



KYB 50/16 SHOCK COMPRESSION ADJUSTER.

211-015-200-001

OWNER'S MANUAL

RECOMMENDED SETTINGS

Below is a table containing the recommended **start positions** for both high & low speed clicker settings. NOTE: Settings are in clicks **OUT** from fully closed.


HIGH-SPEED	20 Clicks OUT
LOW-SPEED	24 Clicks OUT

INTRODUCTION

The K-Tech Compression Adjuster, for KYB 50/16 Offroad Shock Asborbers, offers numerous benefits over the OEM adjuster. These include:

- Significantly larger adjustability (2x OEM).
- 60 Clicks Low-Speed Adjustment.
- 40 Clicks High-Speed Adjustment.
- 8 Clicks per turn (super fine adjustments).
- Setting tailored to suit discipline & linkage motion ratio.
- Optimised internal pressure balance.
- Improved hysteresis & response time.
- Black & Kashima Brown anodised finish.


ISOLATED COMPRESSION ADJUSTER FORCE

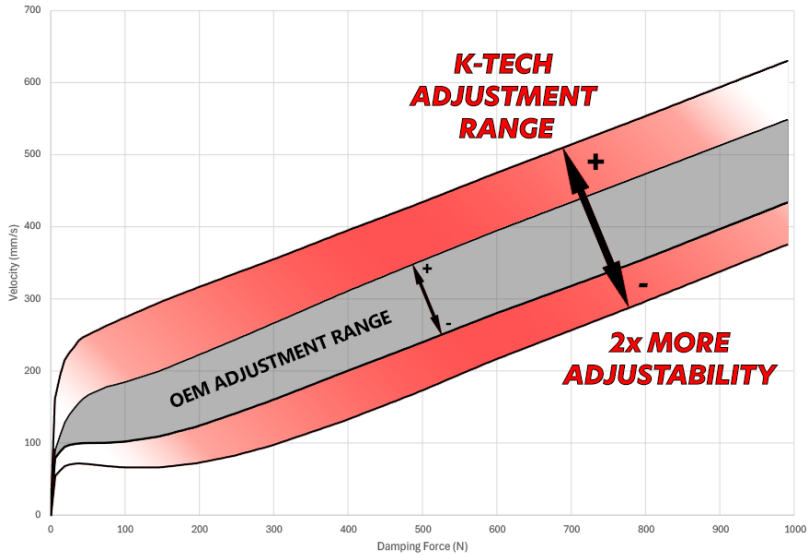

ADJUSTMENT


This compression adjuster has two adjustable clickers. High-speed compression is the Kashima-brown coloured hex, and is adjusted using a *12mm spanner or socket*. Low-speed compression is the small hex inside the High-speed adjuster, and is turned using a *3mm allen key*.

To increase damping on both adjusters, turn them to the **RIGHT**. To reduce the damping on either adjuster, turn them to the **LEFT**.

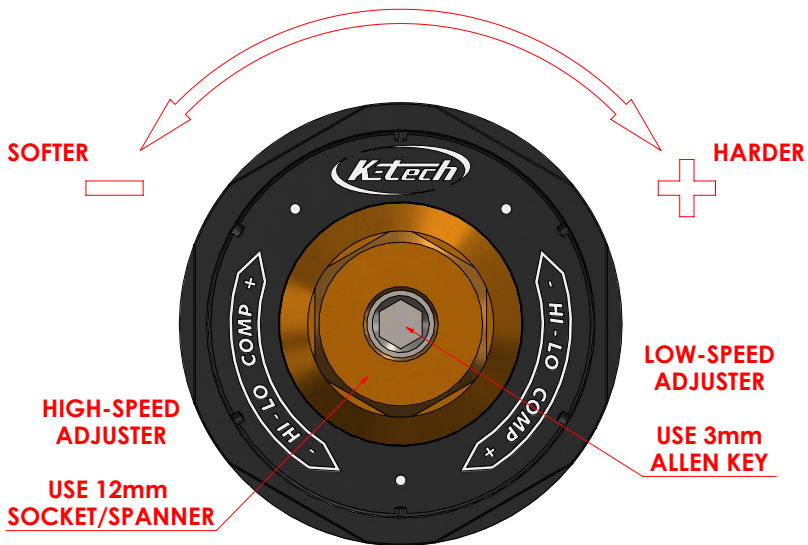

INSTALLATION


This product is designed and tested to be used specifically with KYB 50/16 offroad shock absorbers. Ensure this product is compatible with your shock absorber model before attempting to fit it. This process should only be carried out by a K-tech authorised service centre or qualified technician.

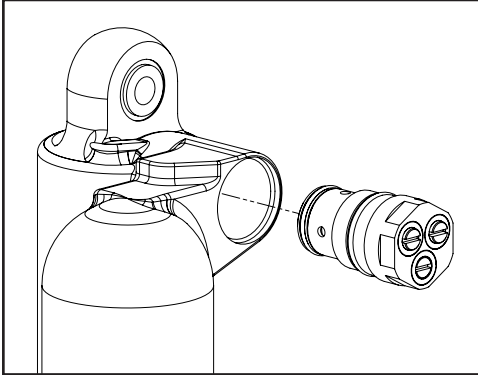


Before beginning, De-Gas the shock absorber first!

Hold the shock absorber securely in a vice, with the compression adjuster facing you.

Using the manufacturer recommended tool, unscrew the compression adjuster and remove it from the cylinder head.

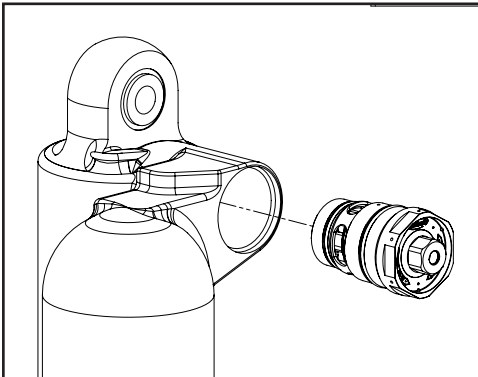

Screw the K-Tech compression adjuster into the cylinder head by hand, until it comes to a complete stop.

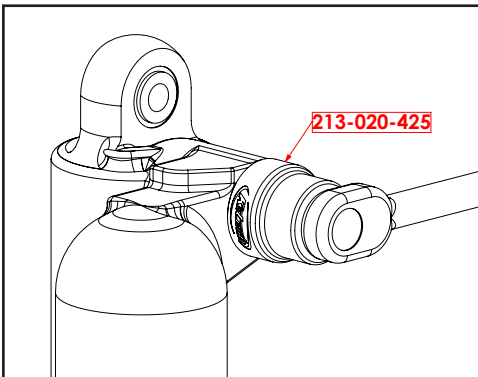

To complete the assembly, you **MUST** use the correct K-Tech tool for your adjuster (**213-020-425**).

Using a 3/8" drive torque wrench, tighten the adjuster to **25 Nm**.

Bleed, and re-gas the shock absorber per the manufacturers workshop manual.



 facebook.com/ktechsuspension

 @ktechsuspension